

CAPS Computer Aided Product Selection Program

This instructional guide includes:

	Improve and Increase Your Design Throughput and Productivity with CAPS
1.	Create a My Greenheck Account
2.	Downloading and Installing CAPS
3.	Running CAPS
	CAPS Live News
	Starting Out
	Selecting a Product
	Configuring Your Product
	Saving and Starting Another Selection
	Printing Reports
	AutoCAD® Drawings and Revit® Content

For installation assistance, please select from the following options:

- Email: CAPS@greenheck.com
- Phone: 855.886.8324
- Live Chat, located under the Software tab on greenheck.com

Improve and Increase Your Design Throughput and Productivity with CAPS

Greenheck's Computer Aided Selection Program (CAPS) includes the widest product offering in the industry including fans, dampers, louvers, kitchen hood systems, make-up air units, energy recovery, laboratory exhaust.

CAPS allows you to:

- Size
- Select
- Apply
- Specify
- Schedule
- Produce Specifications



CAPS includes over 600 unique models

of HVAC equipment.



Easy to Use

- User guides for all levels
- System guides
- Helpful wizards
- Convenient comparisons
- Multiple search options
- Payback analysis
- Automatic updates
- Resource links
- Create and export up-to-date, accurate equipment schedules
- No cost (It's free!)

Collaboration Tool

- Create your Greenheck equipment files for projects
- Share files with your local Greenheck representative
- Provide accurate and detailed product information to architects and building owners

Dynamic Revit[®] and AutoCAD[®] Content

- The only HVAC software selection program in the industry to offer "As Configured" Revit[®] and AutoCAD[®] drawings
- Dynamic content makes design changes quicker and easier than any other program
- Saves designers hours of time when updating drawings

1. Create a My Greenheck Account

Registration (Sign-in)

If you do not have a My Greenheck Account, your first step is to create an account.

Go to www.greenheck.com, click on My Greenheck. You'll be directed to the My Greenheck page. Click on the "Create My Greenheck Account" link to create a new account.

Once you have completed the form, click "Submit".

Verification Email

Once you have created your account, you will receive an email containing a link to activate your account.

If you do not receive an email within 15 minutes, please email mygreenheck@greenheck.com stating that you have not received your registration verification email. We will manually activate

your account. This could occur if your spam filter blocked the message.

- 1. Click the hyperlink in the verification email to activate your account
- 2. Click the blue underlined link (log in) within the email message.
- Enter your email address and password. Click "Log In".







2. Downloading and Installing CAPS

Download CAPS

Once you are logged into your software account, click the "Download CAPS" button to download the application.

Activation Key

Your activation key will be displayed on the download page. Copy or write down this key, you will need it the first time you run CAPS.

Select "Download CAPS".

If you forget the activation key, log back in to your account and visit the download page to view it.

Save the Download File

You must SAVE the file. It will not install properly

if you select Run. Save the file to your desktop (the program default). Once the download is complete, close your browser. Do NOT run from the Download pop-up.

Run the Installation

Locate the CAPS set-up file saved on your desktop.

To install on a **Windows® System:** You must have Administrator rights. Double-click on the set-up file. The CAPS set-up program will automatically begin to run. If an error appears stating that you do not have Administrator rights, please contact your IT department.

On Windows® 7, **Windows® 8 and Windows® 10 systems**: You may see the User Account Control prompt asking you to allow changes to your computer. If so, click Yes.



a are using Windows Tells or 7 systems, one must be in 'R studier the CaPI fields too any choice. Not as advected

CAPS installation

CAPS Activation Key





Alternative Installation Method: If you are an IT Administrator or you don't have admin rights, we have an MSI based installation package available; please contact the CAPS Customer Support group to obtain it. The MSI installation package allows the following:

CAPS Setup

- a. Allows for server to stations mass deployment ability
- b. Allows CAPS to run after a failed update (because user doesn't have admin rights)
- c. Allows for installation and operation without internet access

The Install Sequence

A series of questions will appear as you go through the install process. The program will default to the most common answers so you may click "Next" through them.

Read through the License Agreement and check the box to proceed.

You may be prompted to install missing prerequisites. If prompted, select the Download and Install Now button. (There may be some additional user interaction required.)

When the install sequence is complete, this screen will display. Click "Finish".

The first time CAPS is launched you will be prompted to enter the activation key. This is the only time you will need to enter the activation key.



Activate CAPS
Enter activation key:
OK Cancel

To run the program, click on the CAPS icon on your desktop.

When the installation is complete and CAPS is running properly on your PC, you may delete the setup.exe file from your desktop. The set-up file is only needed for the initial CAPS installation. It is not needed to run the CAPS application itself.



A statements



3. Running CAPS

LOCALE tab

The first time you run CAPS, you will need to set your default Location, Design Conditions and Costs. These set the defaults for each new job you create.

- 1. Location Country/Region, State/Province, and City sets the Power Frequency.
- 2. Elevation is based on ASHRAE 2009 standards. The default elevation can be overridden. Elevation affects fan and coil performance.
- The Dry/Wet Bulb Temperatures are also based on ASHRAE 2009 standards. The default temperatures can be overridden. Temperature settings affect coil performance.
- 4. Energy costs are for calculating operating costs, energy savings, and payback amounts. The values can be changed from the default for your specific area.

PROPERTIES tab

- 5. Display, choose "U.S." or "Custom" measurement units for specific fields (Dimensions, Elevation, Weight, etc.).
- 6. Preferences, enable entry of special tagging text for the product models.

PREFERENCES tab

 Sizing grid defaults, sets the visible fan performance columns.
 Fan selection defaults, determines the sizing of the motor.

Once you click OK, the User Settings Preferences tab will appear. Enter your email address and set the Default Job File Location.

- 8. A valid email address is required to run CAPS.
- 9. Default Job Location, sets the location where your job files are saved. You may select to browse for a different location.

	ob rempi				
	Locale Propertie	referen	ces		
61)	Location				
$\mathbf{\mathbf{\nabla}}$	Country/Region	United Stat	tes.		100
	State/Province	wi ·			-
	ON	Wantash	micinal Airo	ort	
	5753 ·	Contraction of the	and a start of the		
	Power	60 Cyde	*		
2	Design Condition				
	Elevation (ft)	1,198			
	Outdoor Summe	er Dry Bulb T	emperature	(F) 88.1	1
ે	Outdoor Summe	r Wet Bulb 1	enperature	03 74.5	
	Dutrinor Winter	Dry Bub Te	moerature (E) .136	
				11	
4	Costs		1000		
	A/C (per ton)		\$650		
	Electric (per Kw	HO	\$0.08		
	Job Templa	te			
	Locale Properties	Preferences			
5	Display Mean compart (In)	-	1	Palina custor	
	THE REAL PROPERTY OF	* LO	9 1	Creating Contract	No.
6	Preferences				
	Øfiter Line 1	ten Tag	stor / roof cu	rb	
	Solar Une 1	ite Ting Tite Freferences	ator / roof cu	de:	
	Dob Templa	iten Tag Ite ∫ Preferences	etor /roof cu	•	
7	Conter Line 1 Job Templa Locale Properties Fan Sizing ond defa	ten Tag ste ∫ Preferences ults	etor /roof cu	•	
7	Dob Templa Locale Properties Pan Sizing grid defa	iten Tag Ite: ∫ Preferences uits n Pan Speed	eter /roof cu	•	
7	Dob Templa Job Templa Look Popertex Pan Sizing grid defa Dow Nation	iten Tag iten Tag Preferences uits n Pan Speed officiency	eter /roof cu	¢	
7	Dob Templa Loole Properter Fan Stoing grid defa Dow Mininu Dow State I Dow State I	iten Tag iten Tag Preferences uits n Pan Speed ifficency velocity	iter (reef cu	¢	
7	Dob Templa Loole Properties Fan Stoing grid defa Prov Nation Prov Station Stoing Collect Stoing Collect Stoing Collect	gravity densities Teg IDE Preferences uits ■ Fan Speed Homory vetocty ed	iter (reef cu		
7	Briter Line 1 Job Temple Loole Properties Pan String grid defa Phon Minimu Phone Mini	graver verso tem Tag ICE ↓ Preferences welka m Fan Speed Hittency velocity red Dameter tof transa	iter (reef cu		
7	Dob Templa Job Templa Locale Properties Pan Staing grid defa Dow Manimu Dow Cuter Show To Soo Dow Wheel Dow Manel Dow Manel	ette In Fas Speed Honory Ho	ter /roof cu		
7	Deter Line 1 Job Templa Locale Properties Pan Door Minimu Door Minimu Door Minimu Door Soft Door Monen Door Norte Door Monen Door Norte	It is the second	iter /roof ou		
7	Dob Templa Locale Properties Pan String grid defa Draw Minimu Draw Taske I Show Noren Show Rome Draw Rome Draw Rome Draw Sound	Preferences Preferences Preferences Preferences Preferences Well Operings Bends (dl) Power David	Her /roof ou		
7	Deb Templa Locale Properties Fan Stoing grid defa Stoing grid defa Stoing grid defa Stoing grid defa Stoin Visite Stoin Vi	Preferences Preferences Preferences Preferences Preferences Weboty ed Damatar tof Inerta Wal Openings Bands (MN) Power (UN) Power (UN)			
7	Deb Templa Locale Properties Fan String grid defa Drow Name Drow To Soo Drow Watel Show Yoo Sou Drow Watel Show Manel Show Manel Show Manel Show Manel Show South Show Course Show South Show South Show South	preferences web Teg Preferences ults m Fan Speed Hoanstar to f Drenta Wel Openings Bends (JM) Power (JMK) se(Sores) efaults			
7	Dob Templa Locale Properties Pan Stoing grid defa Dow Minimu Dow Static Dow Cuter Dow Cuter Dow Cuter Dow Note Dow Note	Gravity version in Fast Speed IT Preferences uits In Fast Speed Hitting Hitti	vice Pactor	is Preference	
7	Store Line 1 Store Charles Pan Storing grid defa Properties Pan Storing grid defa Prove State Pan Store Outer Show To Spe Show To Spe Show To Spe Show Koof / Show Koof / Show Course Show Koof / Show Course Row Store Course Row Store Course Allow motor to n	gravity version mem Tag bb Preferences webcity edotty edot	vice Pactor	io Preference	
7 7 Settin	Dob Templa Locale Properties Pan Stoing grid defa Door Minimu Door State I Door Minimu Door To So Door Monen Door Monen Door Sound Door Monen Door Sound Door Sound Door Sound Door Sound Door Sound Door Sound Door Sound Door Sound	Control of the second s	vice Pactor	is Freference	
7 7 Settin	Deter Line 1 Job Templa Locale Properties Pan String grid defa Deor Minimu Deor Minimu De	Gravity version hern Tag → Preferences with a m Pan Speed Hittianery velocity ed Dameter tof Sherba Wal Openings Honds (dl) Show(dl)(h)	vice Pactor	io Preference	
7 7 Settin ston	Deter Line 1 Job Templa Locale Properties Pan String grid defa Door Minimu Door Manimu Door Manimu Door Monen Door Monen Mon	Control of the series of the s	vice Pactor	is Freference	
7 7 Settin ces shor ddres	Sing grid defa Fan Skring grid defa Pan Skring grid defa Pan Union Phow Satol Phow Cutler Phow Statol Phow Satol Phow Sound Phow Sound Pho	Gravity version intern Tag Freferences uits In Pan Speed Hitting Hans (general velocity ed Dameter to forensa Wal Openings Honds (dl) Poiner (bunk) sta (Sores) efaults un to the Ser	vice Pactor	is Preference	
7 Settin ston ddress job locat	Sing ord defa Pao Pao Pao Pao Pao Pao Pao Pao Pao Pa	Gravity version here Tag	vice Pactor	is Preference	
7 Settii Settii Sittii	Sone characterial (CAPP) Stand of the second of the seco	Gravity version herm Tag IF Performances with a IF Pan Speed officiency velocity ed Diameter t of Inertia Well Openings Bands (UM) pis (Somes) efaults winto the Ser S Jobs S Jobs	vice Pactor	is Preference	
7 Settin ston ston ston ston ston ston ston sto	Sing ord defa Fan Sing ord defa Papertes Fan Dow Minimu Dow To Soc Dow To Soc Dow Weel Dow Yose Dow Weel Dow Soc Dow Weel Dow Soc Dow Cutor Dow Come Dow Co	Gravity version team Tag Freferences uits	vice Pactor	is Preference	
7 Settin ces job location iddress job location iddress inces moces moces	Sone Constants Sologeneral Stang grid defa Paor Minimu Paor Marinu Paor Marin	Gravity versions state ↓ Preferences uits n Pan Speed Homory velocity ed Dameter tof Snerta Wal Openings Bonds (dl) Poner (bink) efsauts un to the Ser \$ 30081 S 30081 Eng PDFs	vice Pactor	is Preference	
7 Settin Ssettin Iddress Job locator Job l	Sone cher la	Gravity version intern Tag international in Pain Speed Homey velocity ed Dannelar to fine tas Wal Openings Brands (dl) Power (bunk) efaults on into the Ser S Jobel\ S Jobel\ ing PDFs	vice Pactor	is Preference	

U

CAPS Live News

When you open CAPS, the CAPS Live News page displays. You can read through the news items and information to help you. It includes:

- News important Industry and Greenheck changes/news
- Resources user's guide, technical data, and support contacts (Contact Us)
- Links useful web links such as Greenheck.com and AMCA International.



Starting Out

To select a product, click on the "Start a New Job" button on the CAPS Live News page.

You can also start a new job by clicking on the Jobs button (found on the lower left corner of the screen). Then, to create a new job, click on the New Job icon.

C4-0-	• • • •		
Star	t a N	ew Jo	D

Jobs	
Updates and settings	
CAPS Live news	

What is a Job?

A job is created when you choose products and configure them. CAPS stores your choices using that job name so the job can be retrieved at a later date, without having to make a new selection.

Creating a New Job

Before a product selection can be made in CAPS, a new job file must be created. You can accept the default name or enter your own. Click OK to save.

New Job	Name		×
Please e	enter a name	e for the n	ew job.
Job 20	11-09-08 14	.39.57	
	ОК	Canc	el



Selecting a Product

Once you have a Job started, the Product Selection screen appears. There are four ways to select a product.

1. Model

This method is a decision tree which displays all the products. Click on the + next to the Product Family to expand the list. Continue expanding until the Models appear.

2. Model name

If you already know the model name, find the "Model" text box, type the model name and the model will appear.

3. Application

This method is like a wizard that guides you through the selection process by applying filtering criteria to determine which product(s) will work best for you.





To begin, select a Product Family. Then choose from the selection criteria to narrow the Search Results. For many products, the Search Results window includes a Relative Cost guide to help you with your product decision.

4. Manufacturer

This method allows you to select a competing model and the Greenheck equivalent model.

First select a Manufacturer, then find the competitor's Model Number. The Search Results screen will display the equivalent Greenheck model number.



Description and Specification Tabs

Once you have highlighted a model number in the Product Selection area, a picture, description, specifications and documents for that model appear.

- 1. Description a brief description about the product is given along with an image.
- 2. Documents the documents are reference material which can assist you in the selection process.
- 3. Specifications you can copy/paste the specifications for your job specifications. Highlight the specification text you would like to copy, then right-click, select Copy and then paste the text directly into your job specifications.

Once you have the model you want selected, double-click it or click "Continue".

Configuring Your Product

Mark Name

Once you have selected a model, type in the mark name. By default it will be called Mark 1. To rename it, type in the new name, click OK.

What is a Mark?

A mark is an identifier that ties your selection with its location within the building plans. Example, EF-1.



Please enter a n	ame for the new mark
Fiedse enter a na	and for the new mark.
Manufact	
Mark 1	



Making a Selection — Sizing Tab

In this example, we will make a fan selection.

- 1. Enter your basic performance characteristics (Volume, Pressure, Temp), etc.
- 2. Select the Show available sizes button.

Sample Jol	b File -	Mark 2										
Acted CLASS-141-1	7						QD / Sto	dt I	Feet Page	-		
Model Sting P	an Curves	Configuration	on Drawn	us Ison	/Notes	AMCA	Steene	16				
Basic inputs (rei	guired)	CLOURSELL.				-accurate	-				THE	6
Volum	e (CPH) 2.	100	An	treat.Ter	a. (1)	10		3	Onive Loss L	00	•	
State Pressure	e (nieg) (t.)	1		Beyon	on (*0							
Advanced input	e (optional	0										_
Alon Performan	cs Baffe ne	•		Alley Net	. 5.8.	rex .		Relaxed Cr	enersints 🖟	÷		9
		Re	wating Cost	t	Quetor	nize grid	ees.) [1]	Show invalid	sizes	Şon sıs	lable size	
Nodel Name	Relative Cost	Cost / Vr 200	Amuel Pressure (In Hg)	Artual Volume (CPH)	Drive Type	Fan Speed (RPN)	Cowieting Power (hp)	Drive Loss (%)	Minter Time NEMA (htt)	Base Fait Neight (R)	triat dBA (JR)	1
CUBE-141	1.00	193	0.5	2,500	feit.	1545	0.74	7.0	3/4	75	67	
CL6E-151	1.01	150	6.5	2,500	Belt	2070	0.52	8.2	1/2	26	64	
CUBE-112-P	1.26	381	6.5	2,500	Delt.	4571	8.8	6.7	S4		70	
				111002								

Comparing Selections — Sizing Tab

The sizes that meet your entered performance will display in the grid.

- 1. You can compare and re-sort the sizes by clicking the column heading.
- 2. For additional comparison columns, you can select the "Customize grid" button.
- 3. Advanced Performance Corrections are optional and can be used to fine tune your performance. Everything on this tab affects the fan's performance.
- 4. The Help button explains each correction.

Sample Job File - Mark 2 Hodel CutlE 141.7 Cup / Stock Fast/Fast Fast/Fast Hodel CutlE 141.7 Cup / Stock Fast/Fast Fast/Fast Fast/Fast Hodel CutlE 141.7 CutlE 141.7 CutlE 141.7 Fast/Fast Fast/Fast Hodel Static Conduct CutlE 141.7 CutlE 141.7 CutlE 141.7 Fast/Fast Fast/Fast Hodel Static Conduct CutlE 10.0 Avativesm Tang. (f) 10 CutlE 10.0 CutlE 10.0 CutlE 10.0 CutlE 10.0 Static Pressure (n rug) 0.3 Envideor (ft) 0 CutlE 10.0 CutlE

Fan Curves

Next, select the Fan Curves tab on the top of the screen. You can review the fan curve here. There are other subtabs to choose from such as RPM Family, Min/Max Speed, etc.



Configuration Tab

Select the Configuration tab. This tab is used to further configure the options and accessories. The program defaults to the most common selections. You can change these selections.

Drawings

The Drawings tab displays a representative drawing. For information on CAD drawings, see page 15.

Sample Job F	ile - Mark 2				
Model CLINE-141-7		Dest Available	e IDeV Pe	rt.Page (res	
Hodel Sang Pan C	unies Configuration	Drawings SDRs /Notes AMCA She	aning		
Motor Accessories					(.)Hel
Histor (required) -					
Indude Notor & Drive	Tes .	CL Listed None -	Efformicy Rate	nd Standard	
Operating Poliver (hp)	0.74	Endosure (dDP +	Hin. Eff. Rating (N/N GH	
Rotor Design	NONA +	Phase 3	R	PM 1721	
Motor Sile (%)	3/9	voltage est	ittide	49 I.	
Drive					
No. Of Drive Gooves	No Proference -	Grip Notch Balt(s) Ha			
Auto Brit Tensioner	No. •	Sparie Selt(s) None +			
Hotor (advanced)	-				_
Capactor Start	No Preference ·	CSA Approved to Preference	104	te No Pater	* 904
VPD Rated	No Preference ·	Andrent Temp. No Preference ·	Notor MigLecal	on No Piefere	nce ·
				Hotor is 1	abd Detai
Description Total Pan Plodet: CUBE-	141-7		Best Available 1 Day 1 Day	Fast Pass Tes	Vieght (b 79 75
Dode - CUBE Fr Notor - 3/4 hp Drive - 1545 R Accessories	en , ODF, 460/60/3, 172 PM - Factory Hoursed	LDey	-	24	
to LL Listing Switch, 1814	1, Toggie, Ship Separa	ate, Field Mounted	1 Dey		4

Saving and Starting Another Selection

Saving

1. Once your selection is complete, save the job by selecting the save button/icon in the upper left corner of the screen.

Starting a new selection

- 2. To start a new selection for the same job, select the New Mark icon and the process starts all over again.
- 3. To start new a selection of the same model with the same options/accessories, select this icon.



Printing Reports

 After you have completed your product selection(s) and saved your job, you can print a report. There are four types of reports: Equipment Schedule, Submittal, Drawings, and Revit Drawing. We will discuss the first two in this section.



Equipment Schedule Report
 There are lots of printing options to choose from, please review them and make your selections

appropriately. A few common selections are:
Destination: print to a printer, pdf file for an electronic copy, or you can print to a .csv file which can easily be

- imported to Microsoft[®] Excel[®] or AutoCAD[®].
 Measurement Units: change the units of measure from U.S. to metric (Custom).
- Marks Tab: select the mark or marks you want to print



3. Submittal Report

There are lots of options to choose from, please review them and make your selections appropriately. A few common selections are:

- Destination: print to a printer, or pdf file for an electronic copy
- Measurement Units: change the units of measure from U.S. to Custom
- Marks Tab: select the mark or marks you want to print
- Mark Sort Order: selected the order in which you want to print the marks
- Optional Pages: select the level of detail you want to print
- 4. Specification Generation

This report option will generate a 'dynamic' specification based on the configured and saved selection from CAPS along with options and accessories.

CAPS will create a new folder where the job file was saved. Title the new folder with the CAPS job title name and create Microsoft[®] Word[®] formatted files for each saved mark from the job.

AutoCAD[®] Drawings and Revit[®] Content

1. Drawings

2-D CAD drawings are available from CAPS in a .dwg format per each mark selected. Make sure you are at the job level and select the Reports icon, then select Drawings, select the mark(s) you want to generate drawings for. Click OK. Your drawings will be located in the folder where the Job File is stored.

CAD availability of each product model in CAPS is shown on our website at http://www.greenheck.com/drawings/

2. Revit® Content

Revit families are available from CAPS. Drawing content is dynamically generated per each mark's configuration. Make sure you are at the job level and select the Reports icon, select Revit Drawing, then select the mark(s) you want to generate content for. Click OK. The Content Family (.rfa), specific configuration (.txt), and Summary (.csv) files are located in the folder where the Job File is stored. For full details, including the proper loading procedure, please see "Revit Drawings" under Resources on the CAPS Live Page.



A video demonstration of how to use and update dynamic Revit content from Greenheck's Computer Aided Product Selection program (CAPS) is found on Greenheck's YouTube channel at https://www.youtube.com/watch?v=t45CBEivkJA

Updates and Settings

If you would like to update your settings or default job info, click the Updates and Settings button in the lower left corner of the screen.





